


## Installing Fascia (Side) Mounted Railing using PSB & PSCB

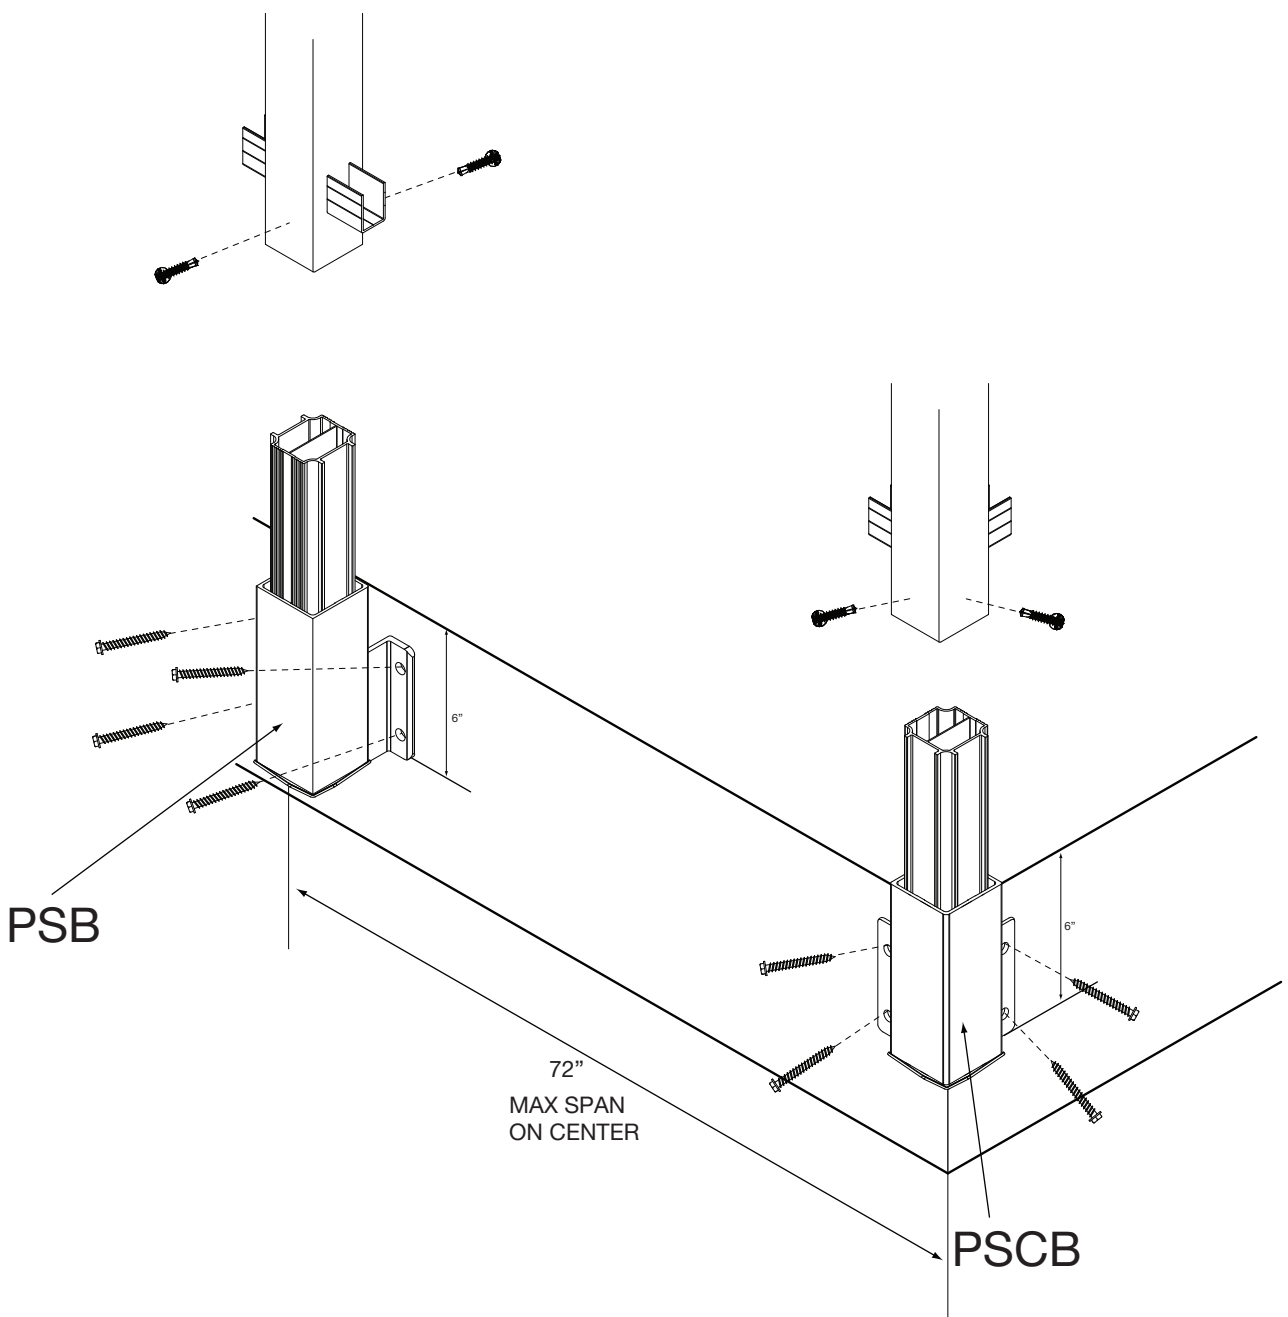

Regal standard deck mounted posts can be adapted to side-mounted posts using our 2 styles of side mount attachment brackets. The PSB can be used to adapt end, line, stair or inside corner applications to side mounted. The PSCB is used where a corner post is required on an outside corner application.

Locate & mark position of all side mounts brackets around perimeter of deck maintaining a maximum distance of 72" on center between brackets. Fasten all brackets snugly with one fastener only until posts and rails are in place. Underside of bracket must be 6" below deck surface to achieve code railing height of 42". Remove base plates from posts and slide posts onto side mount brackets as required. Secure post to side mount brackets using # 10 x  $\frac{3}{4}$ " screws. Measure distance between posts at base of post, deduct  $\frac{1}{2}$ ", cut and install top & bottom rails. Level all posts and install remaining fasteners in side mount brackets. Secure top and bottom rails to posts using #10 x  $\frac{3}{4}$ " screws. Check with local building dept. for appropriate fasteners for your installation as codes may vary.